




WEIDER®

740

Model No. WECCSY74091

Serial No. _____

The serial number is found in the location shown below. Write the serial number in the space above.

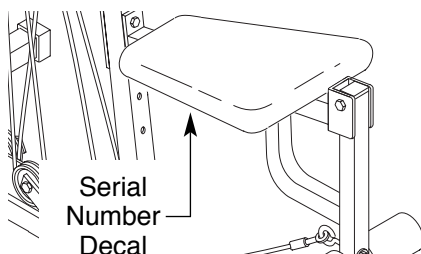

QUESTIONS?

As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or if there are missing parts, please call:


1-888-936-4266

Mon.–Fri. 8h00 until 18h30 EST
(excluding holidays).

⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

USER'S MANUAL

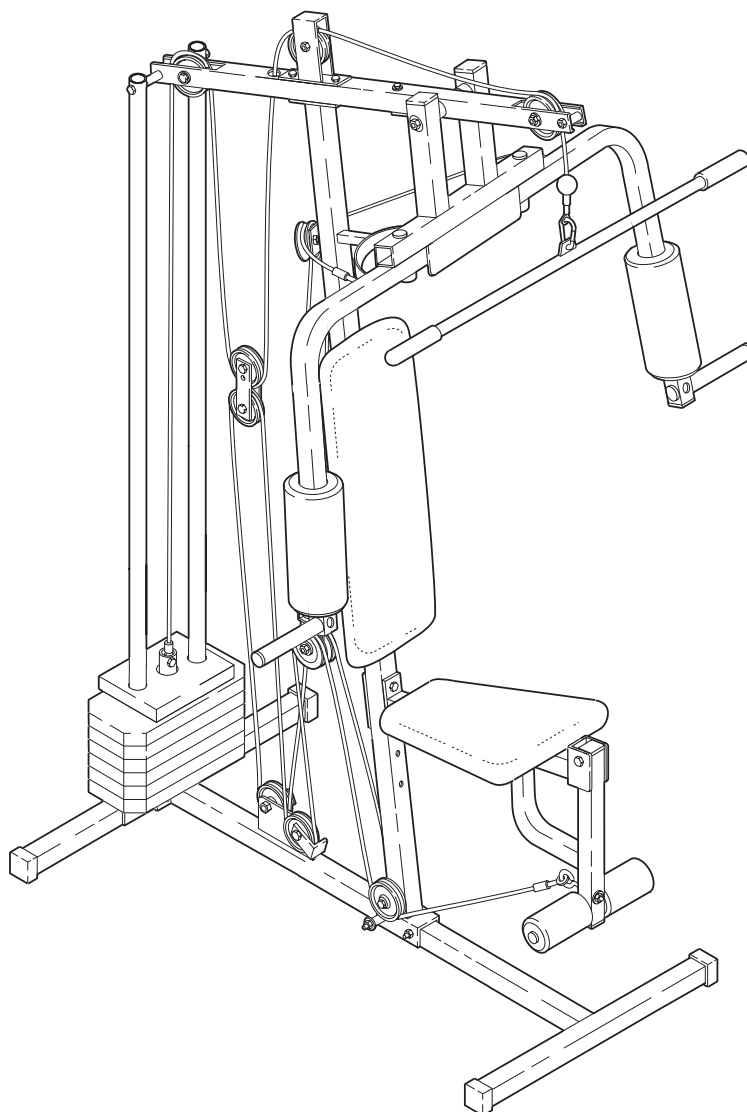

Visit our website at

www.weiderfitness.com

Table of Contents

Limited Warranty	2
Important Precautions	3
Before You Begin	4
Assembly	5
Cable Diagrams	15
Adjustment	17
Trouble-shooting and Maintenance	18
Weight Resistance Chart	19
Ordering Replacement Parts	Back Cover

Note: A PART LIST/EXPLODED DRAWING and a PART IDENTIFICATION CHART are attached in the centre of this manual. Remove the centre pages before beginning assembly.

Limited Warranty

ICON OF/DU CANADA, INC., (ICON), warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of one (1) year days from the date of purchase. This warranty extends only to the original purchaser. ICON's obligation under this warranty is limited to replacing or repairing, at ICON's option, the product at one of its authorized service centers. All products for which warranty claim is made must be received by ICON at one of its authorized service centers with all freight and other transportation charges prepaid, accompanied by sufficient proof of purchase. All returns must be pre-authorized by ICON. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an ICON authorized service centre, to products used for commercial or rental purposes, or to products used as store display models. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature. Some provinces do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you. The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some provinces do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein.

This warranty gives you specific legal rights. You may also have other rights which vary from province to province or so specified by the retailer of your equipment.

ICON OF/DU CANADA, INC., 900 de l'Industrie, St-Jérôme, QC J7Y 4B8


Important Precautions

⚠ WARNING: To reduce the risk of serious injury, read the following important precautions before using the weight system.

1. It is the responsibility of the owner to ensure that all users of the weight system are adequately informed of all precautions.
2. Read all instructions in this manual and in the accompanying literature before using the weight system.
3. If you feel pain or dizziness at any time while exercising, stop immediately and begin cooling down.
4. Use the weight system only on a level surface. Cover the floor or carpet beneath the weight system for protection.
5. Inspect and tighten all parts often. Replace any worn parts immediately.
6. Make sure the cables remain on the pulleys at all times. If the cables bind while you are exercising, stop immediately and make sure the cables are on all of the pulleys.
7. Keep children under the age of 12 and pets away from the weight system at all times.
8. Keep hands and feet away from moving parts.
9. The weight system is designed to be used by only one person at a time.
10. Always wear athletic shoes for foot protection when exercising.
11. Never release the press arms/butterfly arms, leg lever or lat bar while weights are raised. The weights will fall with great force.
12. Always disconnect the lat bar from the weight system when performing an exercise that does not use the lat bar.
13. The weight system is intended for home use only. Do not use the weight system in a commercial, rental, or institutional setting.

⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

The decal shown at the right has been attached to the weight system in the location shown. If the decal is missing or illegible, please call our customer service department (refer to the front cover of this manual) to order a free replacement decal. Apply the decal in the location shown.

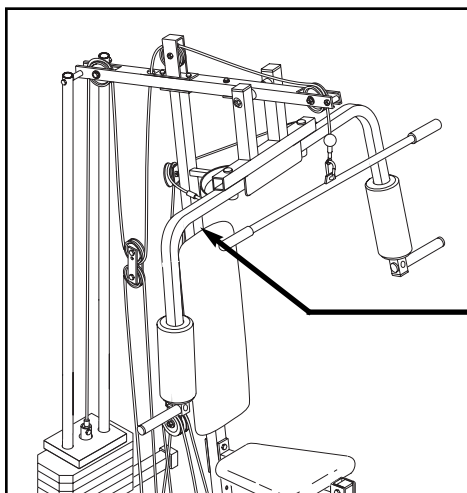

⚠ WARNING

- Misuse of this product may result in serious injury.
- Read user's manual and follow all warnings and operating instructions prior to use.
- Do not allow children on or around machine.
- Replace label if damaged, illegible, or removed.


Before You Begin

Thank you for selecting the versatile WEIDER® 740 weight system. The WEIDER® 740 offers a selection of weight stations designed to develop every major muscle group of the body. Whether your goal is to tone your body, build dramatic muscle size and strength, or improve your cardiovascular system, the WEIDER® 740 will help you to achieve the results you want.

For your benefit, read this manual carefully before using the weight system. If you have additional questions, please call our Customer Service

Department toll-free at **1-888-936-4266**, Monday through Friday, 8h00 until 18h00 Eastern Time (excluding holidays). To help us assist you, please note the product model number and serial number before calling. The model number is WECCSY74091. The serial number can be found on a decal attached to the weight system (see the front cover of this manual).

Please use the drawing below to familiarize yourself with the major parts of the weight system.

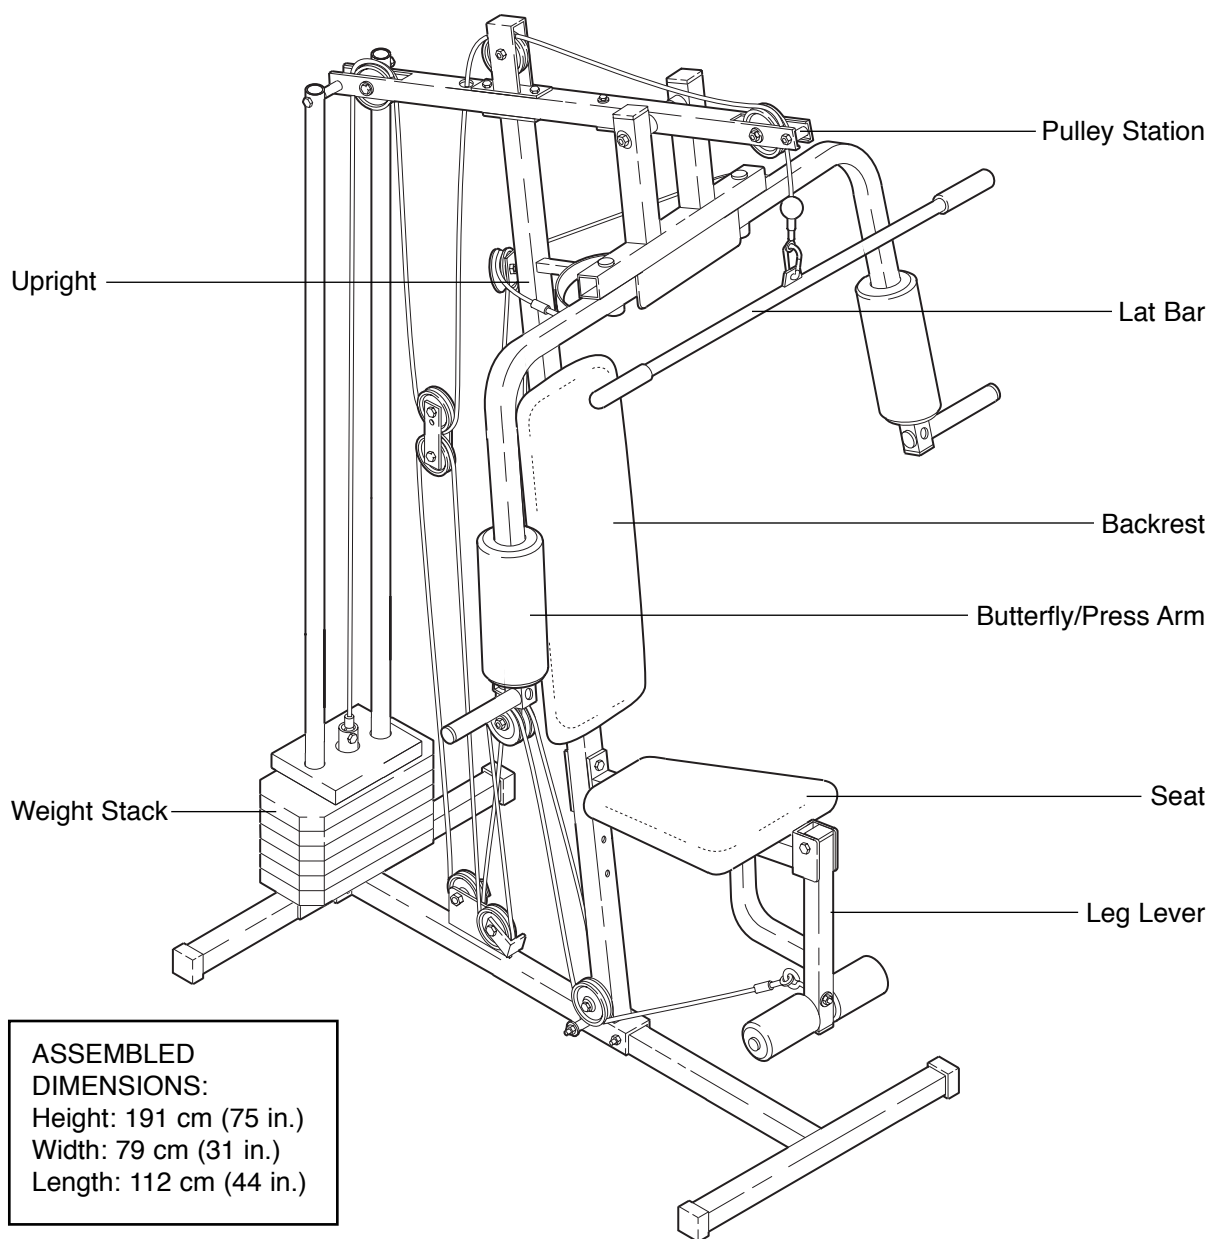

Assembly

Important: This introduction will save you more time than it takes to read it.

Make Things Easier for Yourself

Everything in this manual is designed to ensure that the weight system can be assembled successfully by anyone. However, it is important to realize that the versatile weight system has many parts and that the assembly process will take time. Most people find that by setting aside plenty of time, assembly will go smoothly.

Clearing a Workspace

Clear a workspace that is large enough to hold all parts and allow you to walk all of the way around the weight system.

Unpacking the Box

To make the assembly process as smooth as possible, we have divided it into three separate stages. All parts used in each stage are found in individual packages in the shipping box. Place all parts in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed.

Important: Wait until you begin each assembly stage to open the parts bag labeled for that stage.

Identifying Parts

To help you identify the small parts used in assem-

bly, we have included a PART IDENTIFICATION CHART in the centre of this manual. Place the chart on the floor and use it to easily identify parts. Note: Some small parts may have been pre-attached for shipping. If a part is not in the parts bag, check to see if it has been pre-attached.

Orienting Parts


As you assemble this product, be sure that all parts are oriented as shown in the drawings.

Tightening Parts

Tighten all parts as you assemble them, unless instructed to do otherwise.

Tools Required

Assembly requires the following tools (not included):

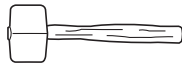- two adjustable wrenches 
- one standard screwdriver 
- one phillips screwdriver 
- one rubber mallet 
- lubricant, such as grease or petroleum jelly, and soapy water.

Assembly will be more convenient if you have a socket set, a set of open-end or closed-end wrenches or a set of ratchet wrenches.

THE THREE STAGES OF THE ASSEMBLY PROCESS

Frame Assembly

You will begin by assembling the base and the upright frames that serve as the skeleton of the equipment.

Arm Assembly

During this stage you will assemble the press/butterfly arms.

Cable/Seat Assembly

During the final stage, you will attach the cables and pulleys that connect the arms with each other and with the weights. The seat and backrest will also be attached during this stage.

Frame Assembly

1. Before beginning assembly, make sure that you read and understand the information on page 5.

Locate and open the parts bag labeled “FRAME ASSEMBLY.”

Press a 1 1/2” Square Outer Cap (27) onto each end of the Stabilizer (5), and place the Stabilizer on the floor as shown.

Press a 1 1/2” Square Outer Cap (27) onto each end of the Base (4), and place the Base on the floor as shown.

Place the bracket on the Weight Guide Support (62) over the Stabilizer (5). (**Note: It will be helpful to have a second person hold the Weight Guide Support while you perform this step.**) Line up the holes in the bracket with the holes in the Stabilizer and insert two 5/16” x 2 1/2” Bolts (14).

See the inset drawing. Slide the bracket on the Base (4) onto the 5/16” x 2 1/2” Bolts (14) and thread 5/16” Nylon Locknuts (3) onto the Bolts. **Do not tighten the Nylon Locknuts yet.**



2. Place the bracket on the Upright (42) over the Base (4). **CAUTION: Make sure the Upright is oriented as shown. Note: It will be helpful to have a second person hold the Upright while you perform this step.**

Line up the holes in the bracket on the Upright (42) with the indicated holes in the Base (4). Insert a 5/16” x 2 1/4” Bolt (1) through the indicated hole and thread a 5/16” Nylon Locknut (3) onto the Bolt. **Do not tighten the Nylon Locknut yet.**

Locate the Long Cable (23). It is approximately 592 cm (233 in.) long and it has a closed loop on each end.

See the inset drawing. Insert a 5/16” x 3 1/4” Bolt (33) into the closed loop on one end of the Long Cable (23). Next, insert the Bolt into indicated hole in the bracket on the Upright (42) and the Base (4).


Slide a 1 1/2” x 3/4” Spacer (45) and a 5/16” Flat Washer (8) onto the 5/16” x 3 1/4” Bolt (33). Hand tighten a 5/16” Nylon Locknut (3) onto the Bolt. **Note: Leave the Nylon Locknut only hand tight when you tighten the other Locknuts in step 6.**

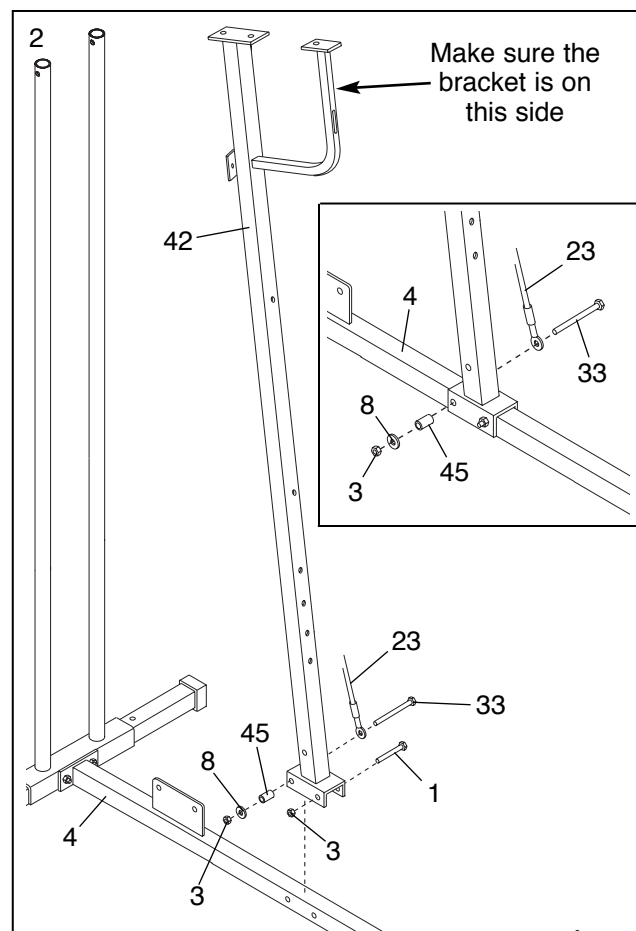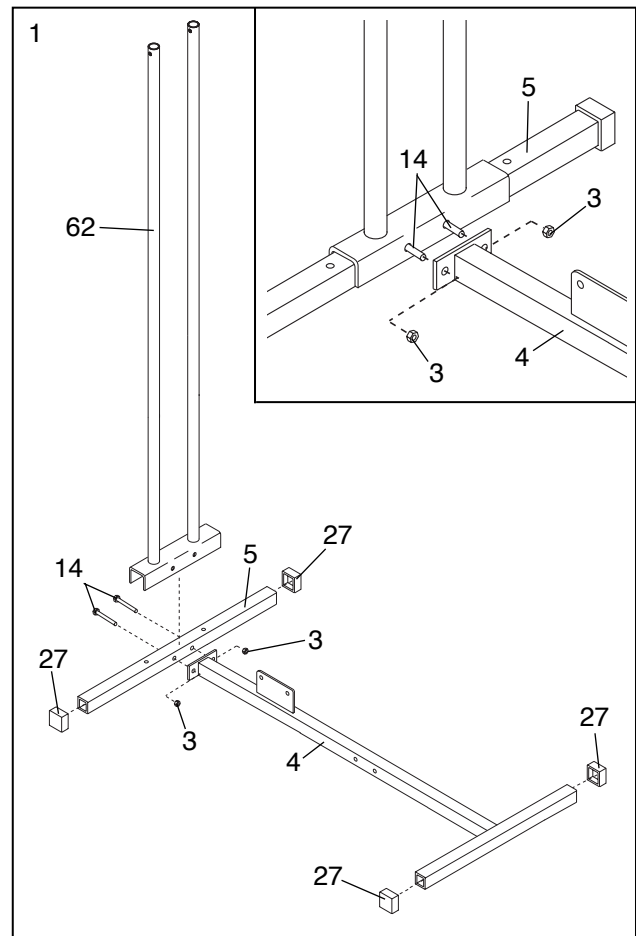

3. Attach the two Weight Bumpers (19) to the Stabilizer (5) with two #8 x 1" Screws (18).

Slide the six Weights (25) onto the two tubes on the Weight Guide Support (62).


Note: Make sure all of the Weights (25) are turned so the pin grooves are on the same side and the grooves are oriented as shown.

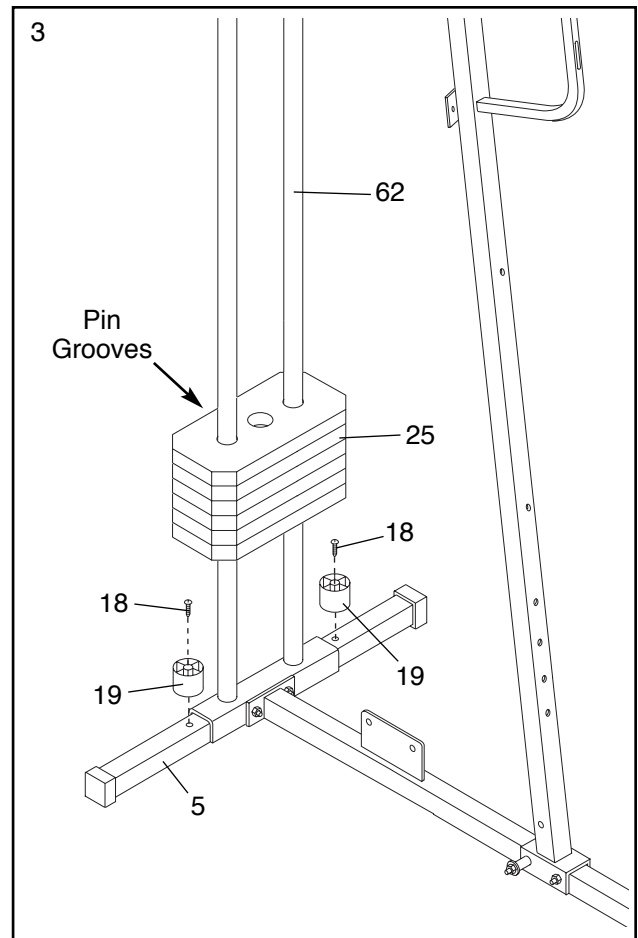

4. Press the Weight Tube Bumper (64) into the end of the Weight Tube (63).

Insert the Weight Tube (63) into the stack of Weights (25).


Lubricate the insides of the holes in the Top Weight (67). With the slot facing down, slide the Top Weight onto the two tubes on the Weight Guide Support (62) and set it on the stack of Weights (25).

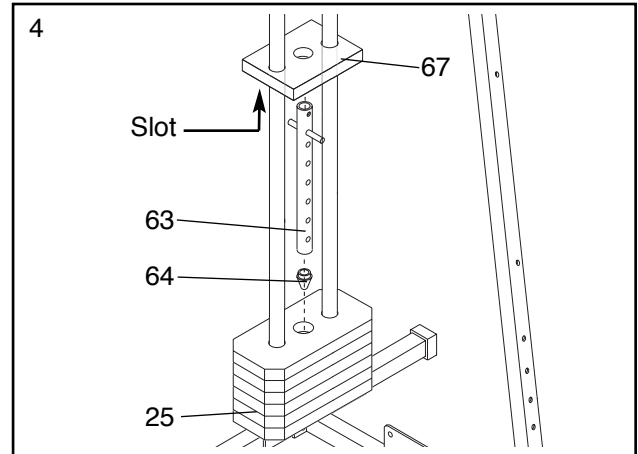

5. Place the Top Frame (55) on top of the Upright (42) as shown. Insert a 5/16" x 2 1/4" Bolt (1) with a 5/16" Flat Washer (8) through the Top Frame and the bracket on the support frame. Finger tighten a 5/16" Nylon Locknut (3) onto the Bolt.

Hold the Large Pulley Bracket (40) on the Top Frame (55). Make sure that the Large Pulley Bracket is turned as shown. Attach the Large Pulley Bracket and the Top Frame to the Upright (42) with two 5/16" x 2 1/4" Bolts (1) and two 5/16" Nylon Locknuts (3).

Do not tighten Nylon Locknuts (3) yet.

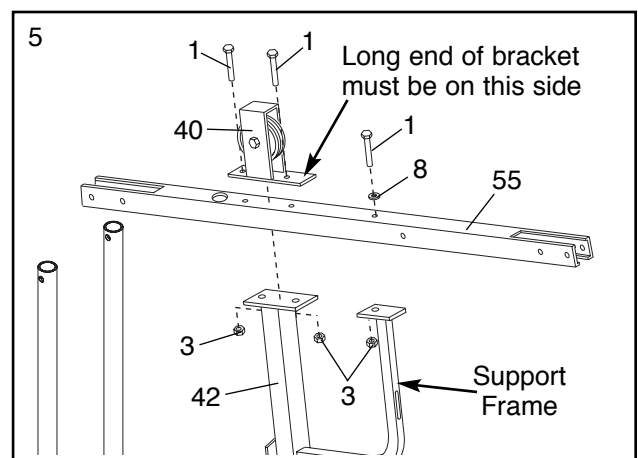

6. Attach the two tubes on the Weight Guide Support (62) to the Top Frame (55) in the following manner:


Insert a 5/16" x 6" Bolt (7) through one of the tubes on the Weight Guide Support (62) until the tip is just visible on the other side. Position a 1/2" x 1" Spacer (51) and insert the Bolt through it. Then, insert the Bolt through one side of the Top Frame (55).

Position a 1/2" x 1 3/8" Spacer (61) inside the Top Frame (55) and insert the 5/16" x 6" Bolt (7) through it. Then, insert the Bolt through the other side of the Top Frame.

Position a 1/2" x 1" Spacer (51) and insert the 5/16" x 6" Bolt (7) through it. Then, insert the Bolt through the other tube on the Weight Guide Support (62).

Finger tighten a 5/16" Nylon Locknut (3) onto the 5/16" x 6" Bolt (7).

Tighten all Nylon Locknuts (3) used in steps 1 to 6.

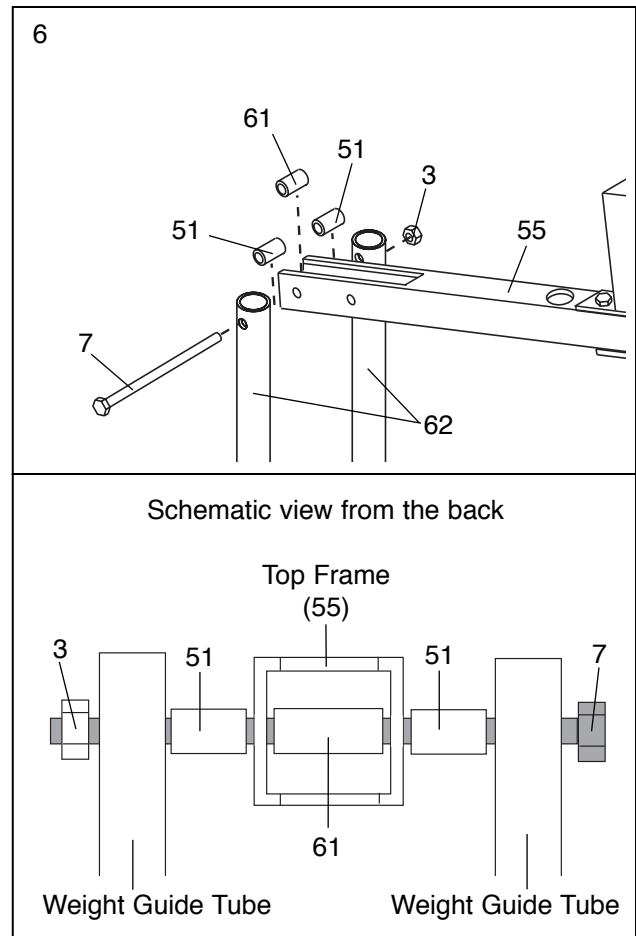


Arm Assembly

7. **Locate and open the parts bag labeled "ARM ASSEMBLY."**

Press a 1 1/2" Square Inner Cap (32) into each of the indicated tubes on the Press Frame (17).

Align the welded spacers on the Press Frame (17) with the indicated holes in the Top Frame (55). Lubricate the 3/8" x 6" Bolt (16). Attach the Press Frame to the Top Frame with the Bolt and a 3/8" Nylon Locknut (21). **Make sure that the welded tab on the Press Frame is oriented as shown.**

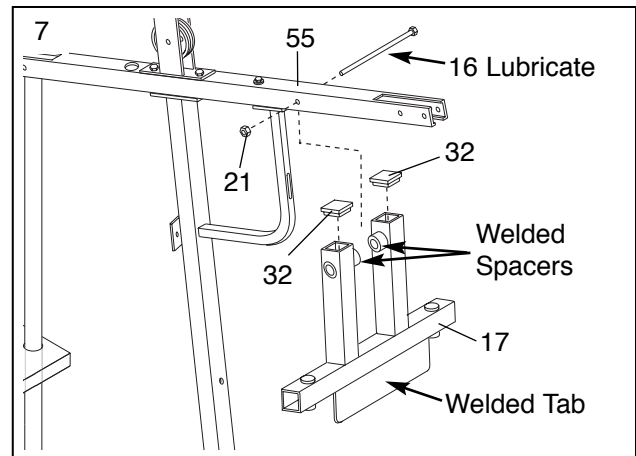


8. Press a 1 3/4" Square Inner Cap (77) into each end of the Right Arm (48).

Wet the lower end of the Right Arm (48) with soapy water, and slide a 7" Foam Pad (71) onto the Arm.

Press a 1" Round Inner Cap (49) into each end of a Press Handle (46). Attach the Press Handle to the Right Arm (48) with a 1/4" x 1 3/4" Screw (52), a 1/4" Flat Washer (10), and a 1/4" Nylon Locknut (2).

Repeat this procedure for the Left Arm (47).

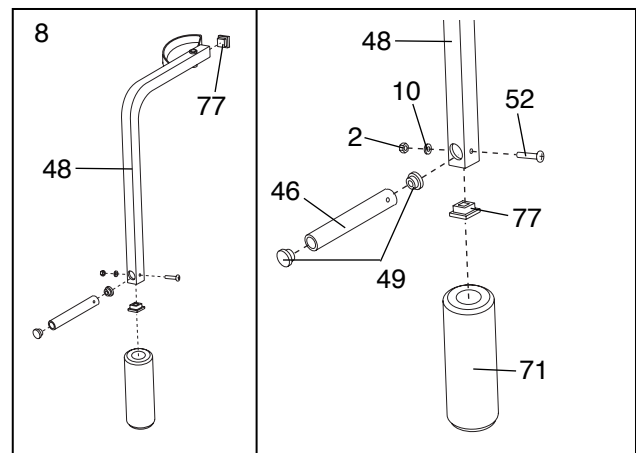


9. Identify the Right Arm (48) and the Left Arm (47) by noting the position of the welded bracket (A) on each Arm. **Arm identification is very important for this step.**

Lubricate both axles on the Press Frame (17). Slide the Right Arm (48) onto the right axle. **Note: Be careful not to confuse the Right with the Left Arm. Make sure that the upper end of the Right Arm is behind the indicated bracket (B) on the Press Frame.**


Place two 1" Retainer Rings (69) on top of a 1" Round Cover Cap (70), and tap all three parts onto the Right Axle with a rubber mallet. **Make sure that the teeth on the Retainer Rings bend towards the Round Cover Cap, as shown in the inset drawing.**

Attach the Left Arm (47) in the same manner.

Press a 1 3/4" Square Inner Cap (77) into each end of the crossbar on the Press Frame (17).

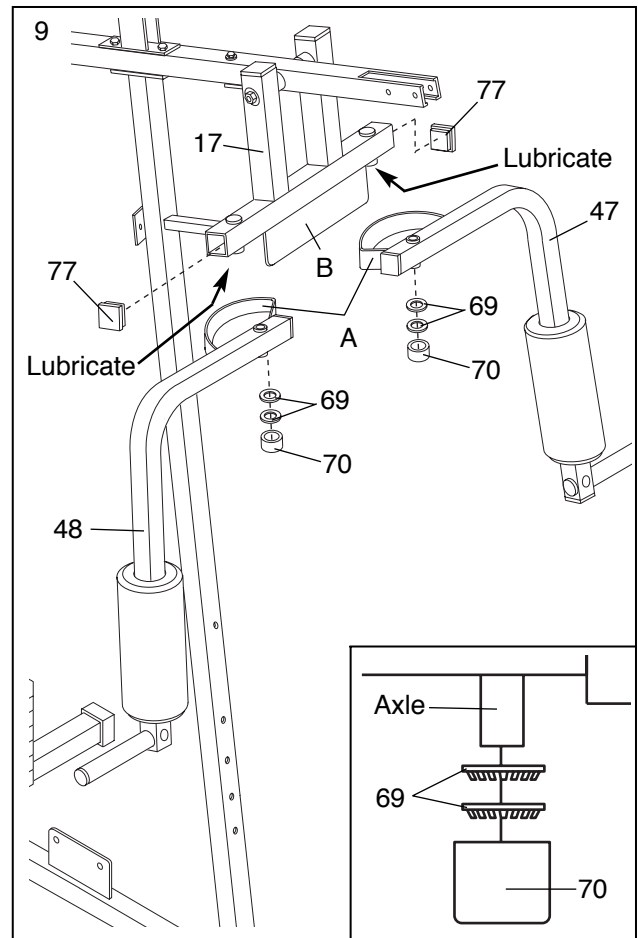

10. Attach the Seat Frame (36) to the Upright (42) with two 5/16" x 2 1/2" Bolts (14), the Support Plate (6), and two 5/16" Nylon Locknuts (3).

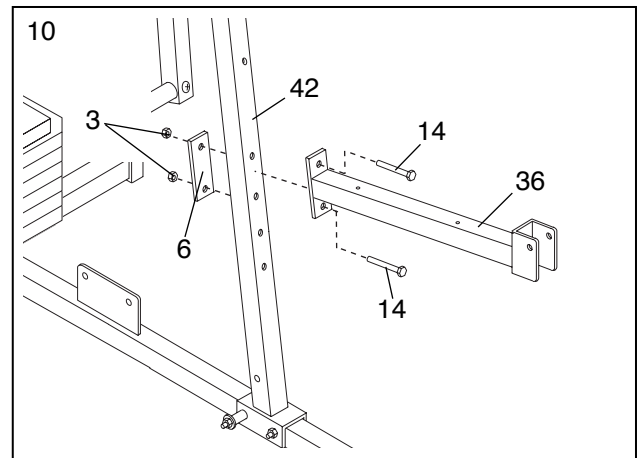


11. Press 1 1/2" Square Inner Caps (32) into the upper and lower ends of the Leg Lever (29).

Press a 1" Square Inner Cap (65) into the top of the indicated tube on the Leg Lever (29).

Thread a 3/8" Plain Nut (56) partway onto the 3/8" Eyebolt (35). Insert the Eyebolt into the indicated hole in the Leg lever (29) and secure it with a 3/8" Flat Washer (9) and a 3/8" Nylon Jamnut (22).

Lubricate a 3/8" x 2 1/2" Bolt (60). Attach the Leg Lever (29) to the bracket on the Seat Frame (36) with the Bolt and a 3/8" Nylon Jamnut (22).

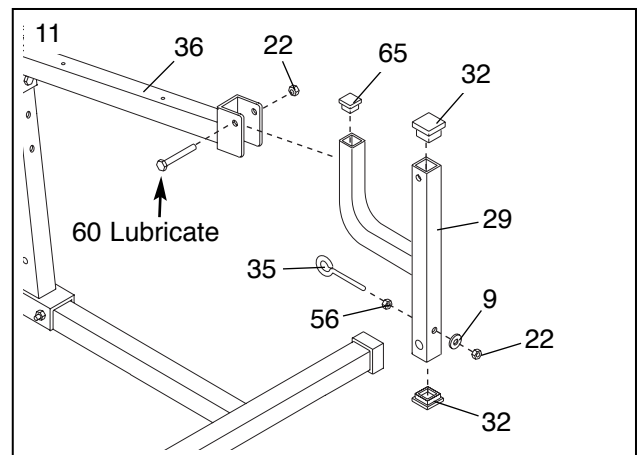


Cable/Seat Assembly

12. Locate the parts bag labeled “CABLE ASSEMBLY AND PULLEYS.” For cable identification and routing during steps 12 through 27, refer to pages 15 and 16.

Slide a 3/8" Flat Washer (9) and a 1/2" x 1/4" Spacer (44) onto a 3/8" x 2" Bolt (12). Next, hold a 3 1/2" Pulley (15) inside the slot in the Top Frame (55), and insert the Bolt into the Top Frame and the Pulley. Slide another 1/2" x 1/4" Spacer (44) and another 3/8" Flat Washer (9) onto the Bolt, and tighten a 3/8" Nylon Jamnut (22) onto the Bolt.

Locate the Medium Cable (58). It is about 330 cm (126 1/4") long and it has a ball on one end and a loop on the other end. Wrap the end with the ball around the 3 1/2" Pulley (15) in the direction shown.

Attach a 5/16" x 2" Bolt (78), a 1/2" x 1 3/8" Spacer (61), and a 5/16" Nylon Locknut (3) to the Top Frame (55) in the indicated location. **Make sure that the Medium Cable (58) is between the Pulley (15) and the Spacer.** Next, press a 1 1/2" Square Inner Cap (32) into the indicated end of the Top Frame.

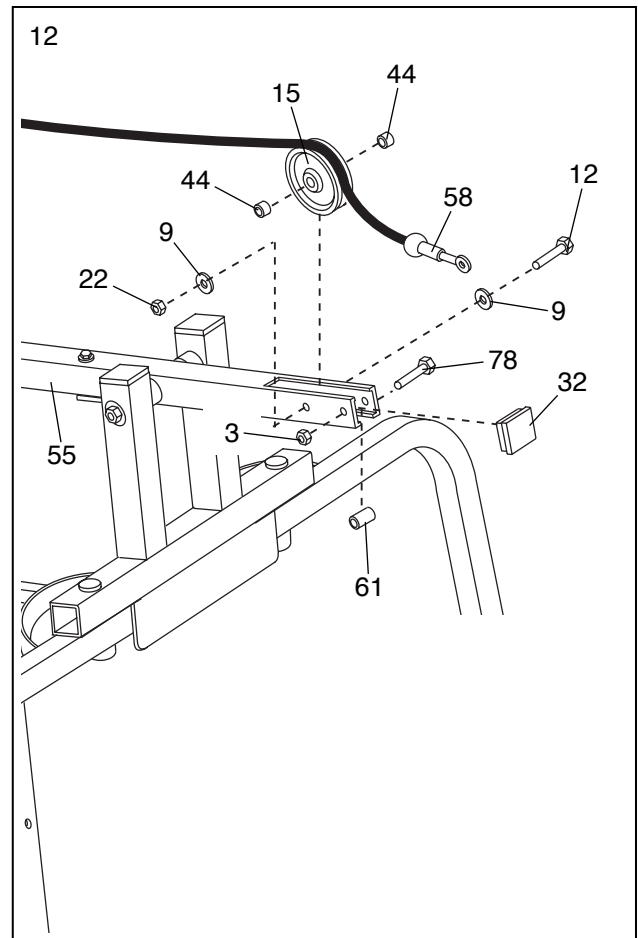


13. Remove the pre-attached 3 1/2" Pulley (15) from the Large Pulley Bracket (40).

Route the Medium Cable (58) through the Large Pulley Bracket (40) as shown.


Attach the 3 1/2" Pulley (15) inside the Large Pulley Bracket (40) with a 3/8" x 1 3/4" Bolt (68) and a 3/8" Nylon Jamnut (22). **Make sure that the Medium Cable (58) runs over the top of the Pulley.**

Route the Medium Cable (58) down through the hole in the Top Frame (55).

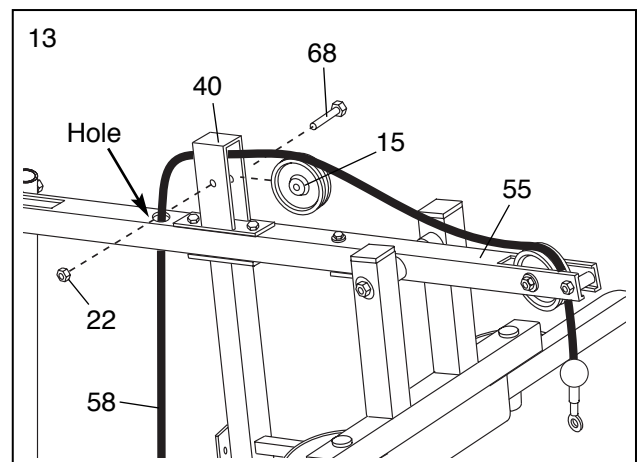

14. Remove the pre-attached 3 1/2" Pulleys (15) from the "I"-Plates (20).

Wrap the Medium Cable (58) around a 3 1/2" Pulley (15) in the direction shown. Attach the Pulley and a Cable Trap (66) to the top hole in the "I"-Plates with a 3/8" x 2" Bolt (12) and a 3/8" Nylon Locknut (21). **Note: Make sure that the "I"-Plates are oriented so the ends with two holes are at the top. Make sure that the Cable Trap is oriented as shown.**

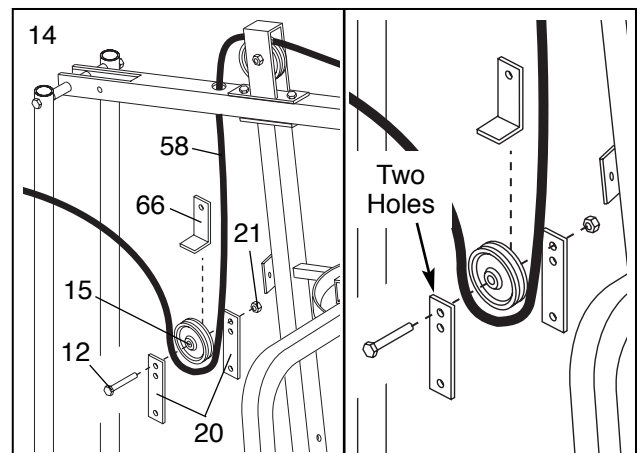



15. Refer to drawing 15a. Remove the 5/16" x 6" Bolt (7), the two 1/2" x 1" Spacers (51), the 1/2" x 1 3/8" Spacer (61), and the 5/16" Nylon Locknut (3) from the Weight Guide Support (62) and the Top Frame (55).

Refer to drawing 15b. Route the Medium Cable (58) up through the indicated slot in the Top Frame (55). Wrap the Cable around a 3 1/2" Pulley (15) in the direction shown and slide the Pulley into the slot in the Top Frame from the back. Attach the Pulley inside the slot with a 3/8" x 2" Bolt (12), two 1/2" x 1/4" Spacers (44), two 3/8" Flat Washers (9), and a 3/8" Nylon Jamnut (22).

Refer to drawing 15a. Re-attach the 5/16" x 6" Bolt (7), the two 1/2" x 1" Spacers (51), the 1/2" x 1 3/8" Spacer (61), and the 5/16" Nylon Locknut (3). **Make sure that the Medium Cable (58) is between the Pulley (15) and the Spacer.**


Refer to drawing 15b. Press a 1 1/2" Square Inner Cap (32) into the indicated end of the Top Frame (55).

16. Attach the loop at the end of the Medium Cable (58) inside the Weight Tube (63) with a 5/16" x 1 1/2" Bolt (11) and a 5/16" Nylon Locknut (3).

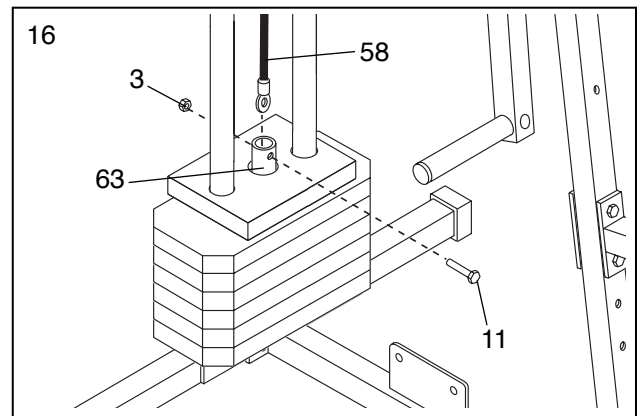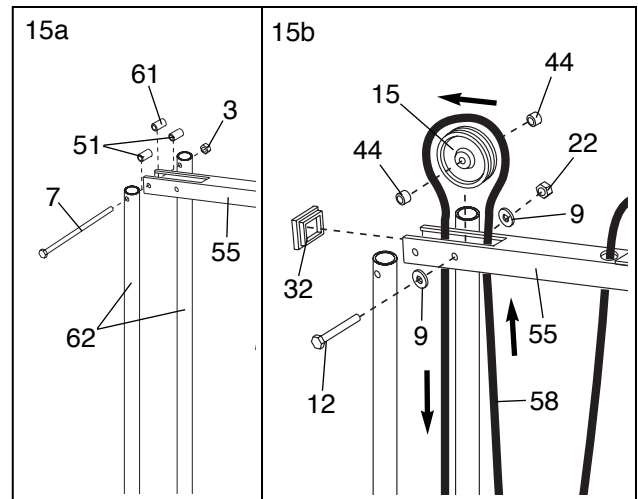


17. **Locate the Butterfly Cable (76). It is approximately 222 cm (87 1/2") long and it has a closed loop on each end.**

Attach one end of the Butterfly Cable (76) to the welded bracket on the back of the Right Arm (48) with a 3/8" x 1" Bolt (59), a 3/8" Plain Nut (56), and a 3/8" Nylon Jamnut (22). **Note: Make sure that the Plain Nut and the Jamnut are mounted in the order shown here. Do not overtighten the Nylon Locknut; the Cable must pivot freely.**

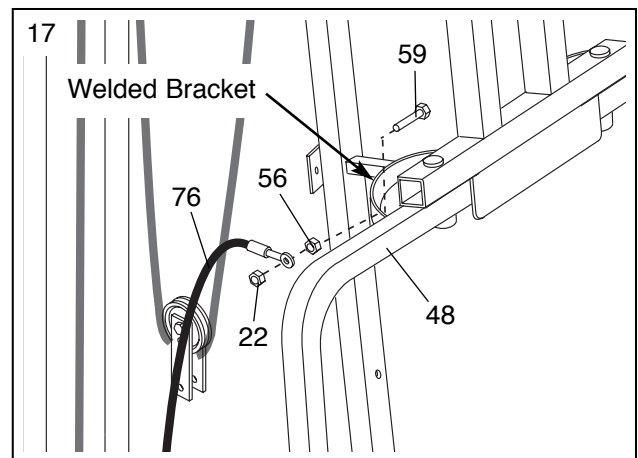


18. Wrap the Butterfly Cable (76) around a Large Pulley (39) in the direction shown.

Attach the Large Pulley (39) and a Long Cable Trap (50) to the welded bracket on the right side of the Upright (42) with a 3/8" x 2 1/2" Bolt (60) and a 3/8" Nylon Locknut (21). **Note: Make sure that the Cable Trap is oriented as shown.**

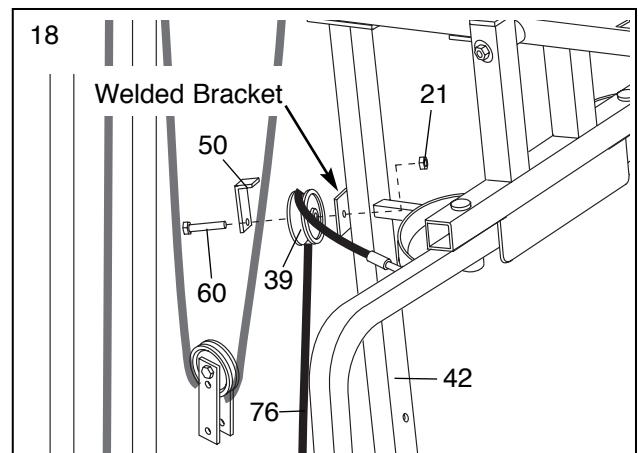

19. Remove the pre-attached Pulleys (15) from the Pulley Bracket (57).


Wrap the Butterfly Cable (76) around a 3 1/2" Pulley (15) in the direction shown. Attach the Pulley to the upper part of the Pulley Bracket (57) with a 3/8" x 1 3/4" Bolt (68) and a 3/8" Nylon Jamnut (22).

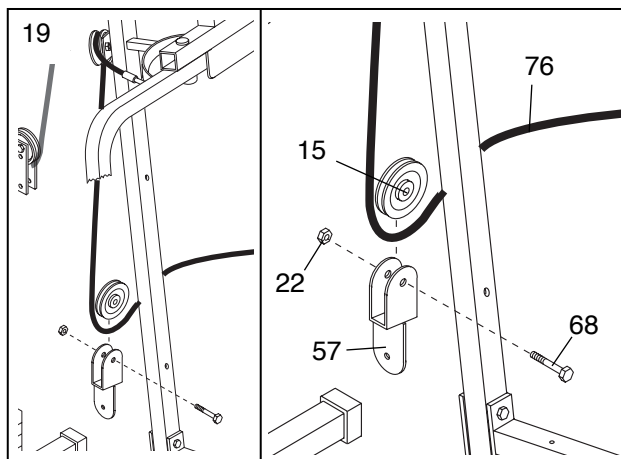

20. Wrap the Butterfly Cable (76) around a Large Pulley (39) in the direction shown.


Attach the Large Pulley (39) and a Long Cable Trap (50) to the welded bracket on the left side of the Upright (42) with a 3/8" x 2 1/2" Bolt (60) and a 3/8" Nylon Locknut (21), as described in step 18. **Note: Make sure that the Cable Trap is oriented as shown, and that the Butterfly Cable (76) is routed as shown in the drawing.**

Attach the free end of the Butterfly Cable (76) to the welded bracket on the Left Arm (47) in the manner described in step 17.

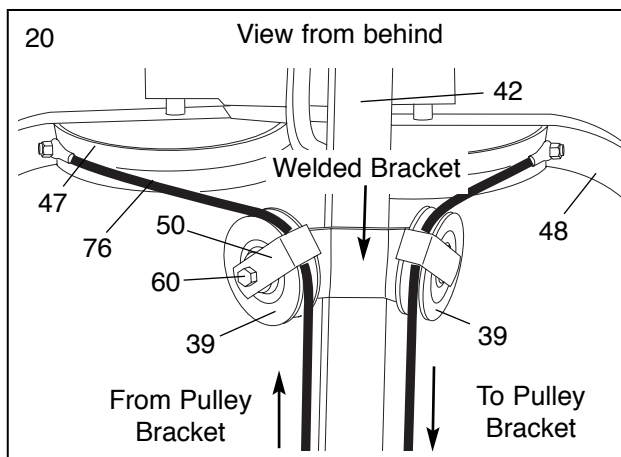


21. Locate the end of the Long Cable (23) that is already attached to the Upright (42). Wrap the Cable around a 3 1/2" Pulley (15) in the direction shown.

Attach the 3 1/2" Pulley (15) to the indicated side of the Pulley Bracket (57) by inserting a 3/8" x 2 1/2" Bolt (60) through the Pulley and the Pulley Bracket. Thread a 3/8" Nylon Jamnut (22) two turns onto the Bolt to prevent the Pulley from falling off during the following steps. **Note: Make sure the Pulley Bracket is oriented exactly as shown and that the Pulley is attached on the indicated side.**

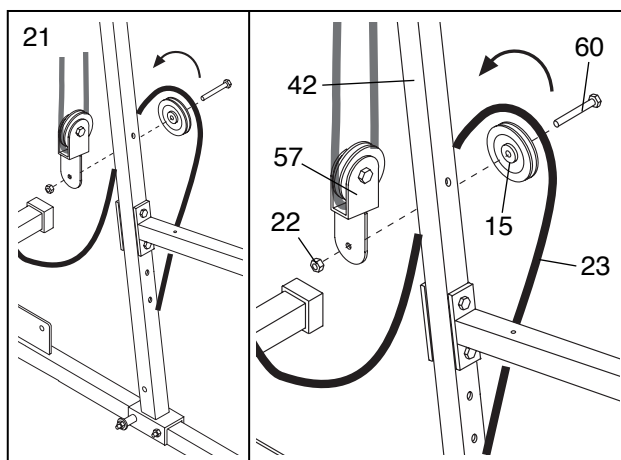


22. Wrap the Long Cable (23) around a 3 1/2" Pulley (15) in the direction shown.

Attach the 3 1/2" Pulley (15) and a Cable Trap (66) to the welded bracket on the Base (4) with a 3/8" x 2" Bolt (12) and a 3/8" Nylon Locknut (21). **Note: Make sure that the Pulley is mounted on the correct side of the welded bracket, as shown. Make sure that the Cable Trap is oriented as shown.**

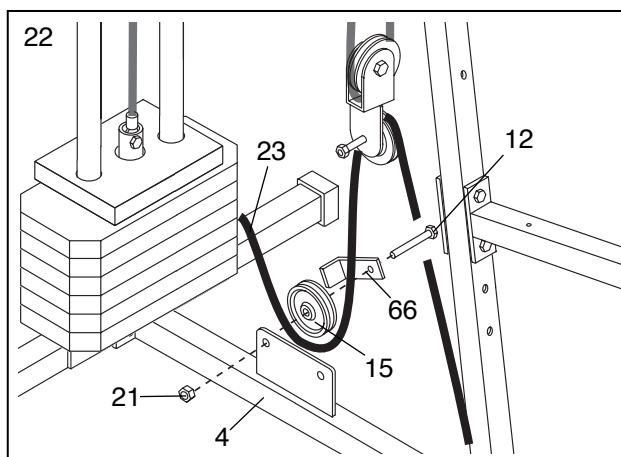


23. Wrap the Long Cable (23) around a 3 1/2" Pulley (15) in the direction shown.

Attach the 3 1/2" Pulley (15) and a Cable Trap (66) to the lower hole in the "I"-Plates (20) with a 3/8" x 2" Bolt (12) and a 3/8" Nylon Locknut (21). **Note: Make sure the Cable Trap is oriented as shown.**

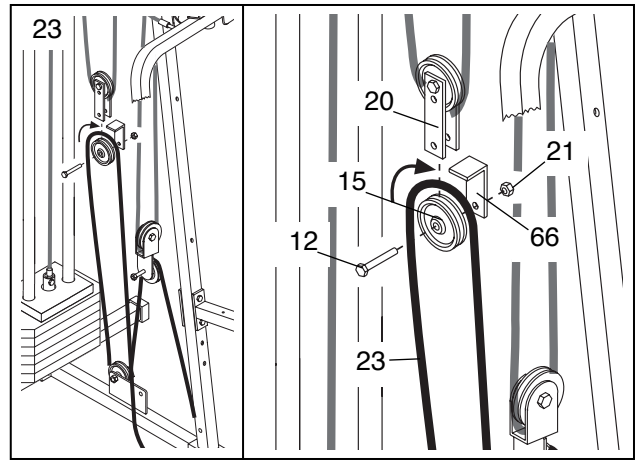


24. Wrap the Long Cable (23) around a 3 1/2" Pulley (15) in the direction shown.

Attach the 3 1/2" Pulley (15) and a Cable Trap (66) to the indicated hole in the welded bracket on the Base (4) with a 3/8" x 2" Bolt (12) and a 3/8" Nylon Locknut (21). **Note: Make sure that the Cable Trap is oriented as shown.**

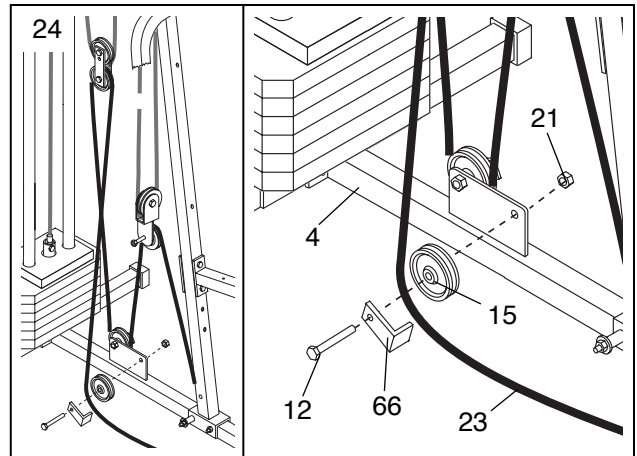


25. Wrap the Long Cable (23) around a 3 1/2" Pulley (15) in the direction shown.

Attach the 3 1/2" Pulley (15) to the indicated side of the Pulley Bracket (57) with the 3/8" x 2 1/2" Bolt (60) and the 3/8" Nylon Jamnut (22) attached in step 21. **Note: Make sure that the Pulley Bracket is oriented exactly as shown and that the Pulley is attached on the indicated side.**

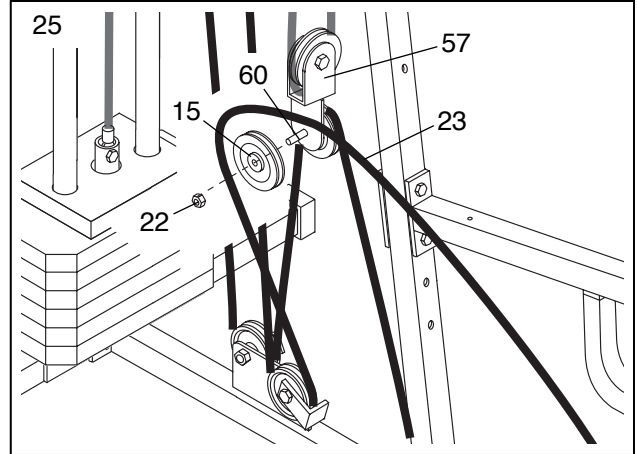


26. Wrap the Long Cable (23) around a 3 1/2" Pulley (15) in the direction shown.

Attach the 3 1/2" Pulley (15) to the indicated side of the Upright (42) with a 3/8" x 3" Bolt (72), a 3/8" Flat Washer (9), and a 3/8" Nylon Jamnut (22). **Note: Make sure the Long Cable (23) is between the Pulley and the indicated Spacer (45).**

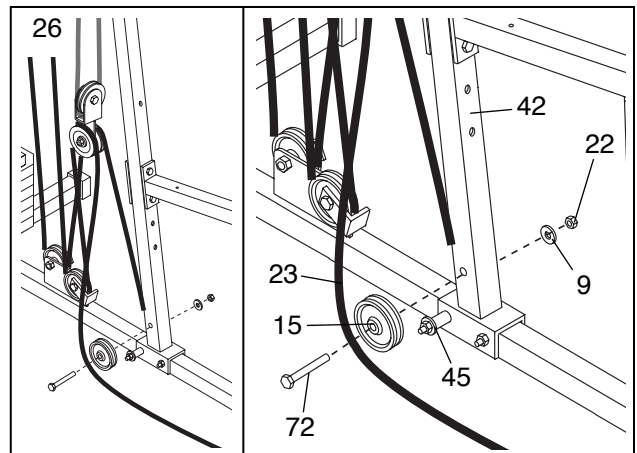


27. Hook the closed loop on the end of the Long Cable (23) onto the 3/8" Eyebolt (35) mounted on the Leg Lever (29).

Tighten the indicated 5/16" Nylon Locknut (3) that is securing the other end of the Long Cable (23).

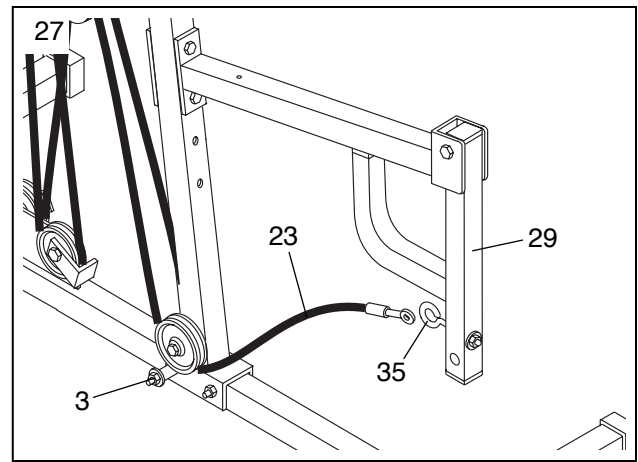


28. Attach the Backrest (41) to the Upright (42) with two 1/4" x 2" Screws (24) and two 1/4" Flat Washers (10).

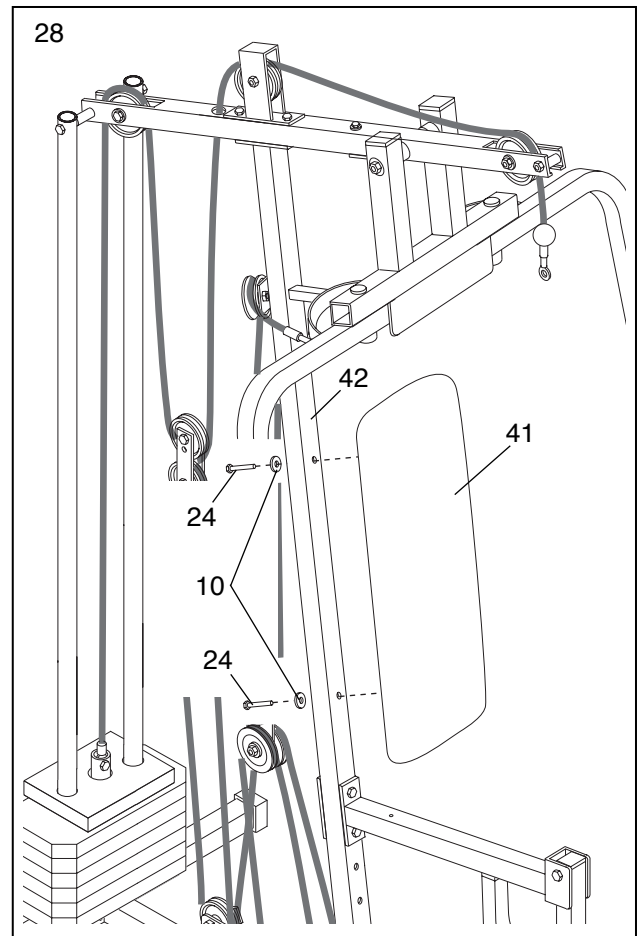

29. Insert the 1/4" x 2 1/4" Carriage Bolt (38) into the centre hole in the Seat Plate (37). Attach the Seat Plate to the Seat (13) with two 1/4" x 3/4" Screws (43).


Insert the 1/4" x 2 1/4" Carriage Bolt (38) into the indicated hole in the Seat Frame (36). Tighten a 1/4" Nylon Locknut (2) with a 1/4" Flat Washer (10) onto the Carriage Bolt.

Attach the other end of the Seat (13) to the Seat Frame (36) with a 1/4" Flat Washer (10) and a 1/4" x 2" Screw (24).

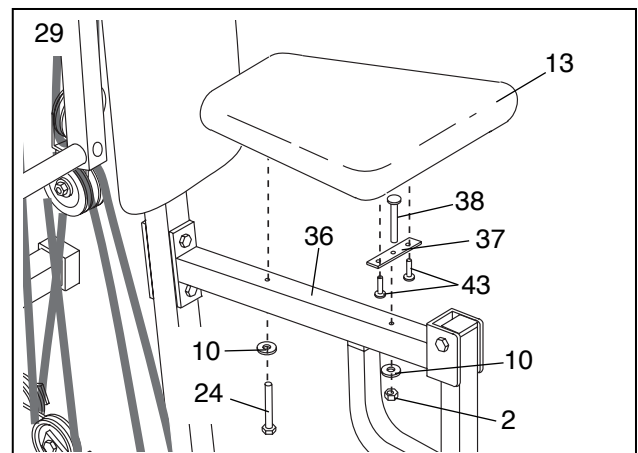

30. Press a 3/4" Round Inner Cap (34) into each end of the Pad Tube (28).

Insert the Pad Tube (28) into the indicated hole in the Leg Lever (29). Slide a Foam Pad (30) onto each end of the Pad Tube.


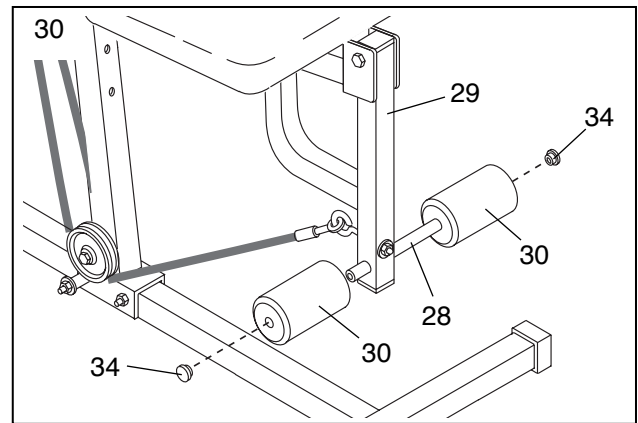



31. Make sure that all parts have been properly tightened. The use of the remaining parts will be explained in ADJUSTMENT, beginning on page 17 of this manual.

Before using the weight system, pull each cable a few times to make sure that the cables move smoothly over the pulleys. If one of the cables does not move smoothly, find and correct the problem. **IMPORTANT: If the cables are not properly installed, they may be damaged when heavy weight is used. If there is any slack in the cables, you will need to remove the slack by tightening the cables. See TROUBLE-SHOOTING AND MAINTENANCE on page 18.**

Cable Diagrams

The cable diagrams below and on the next page show the proper routing of the Medium Cable (58), the Butterfly Cable (76), and the Long Cable (23). The numbers show the correct route for each Cable. **Make sure that the Cables are routed correctly, that the pulleys move smoothly, and that the cable traps do not touch or bind the Cables. Incorrect cable routing can damage the weight system.**

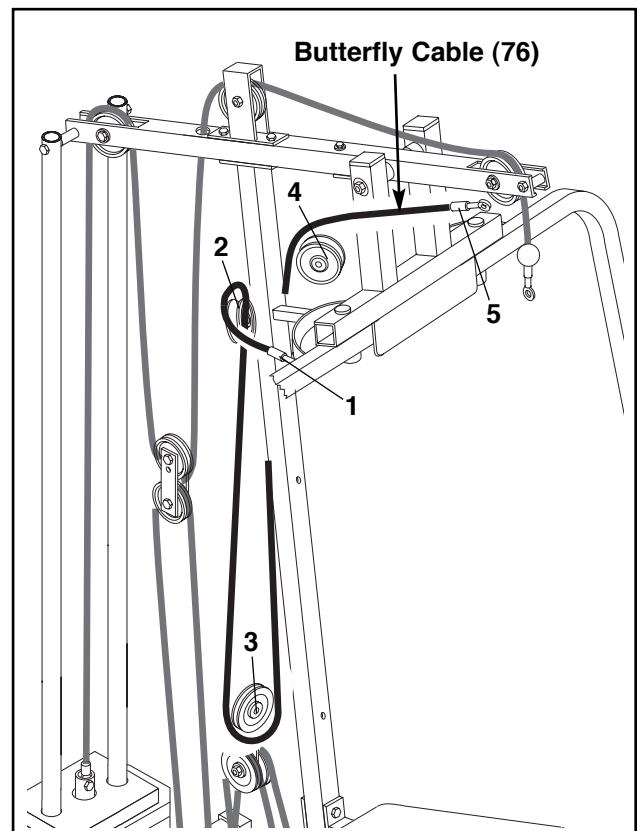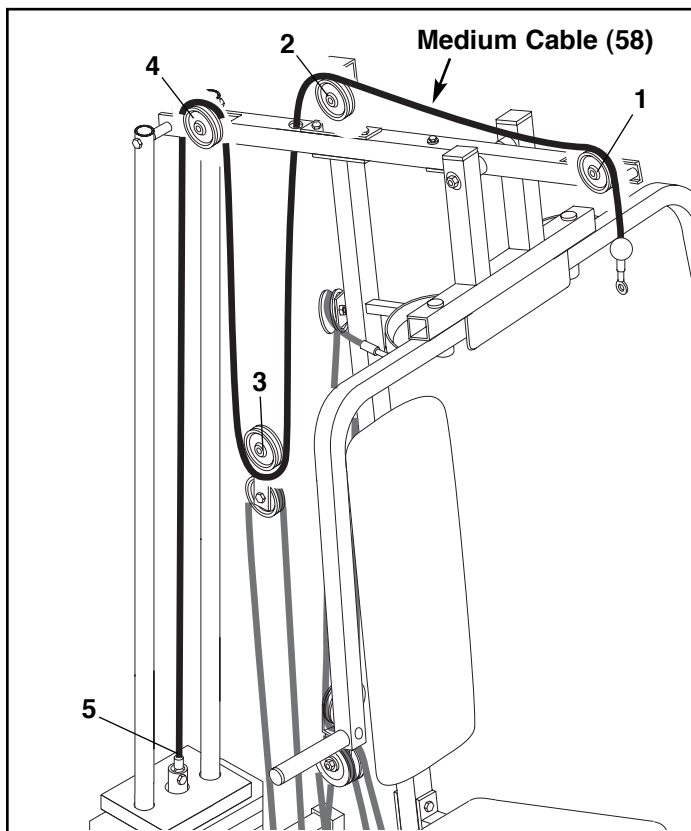

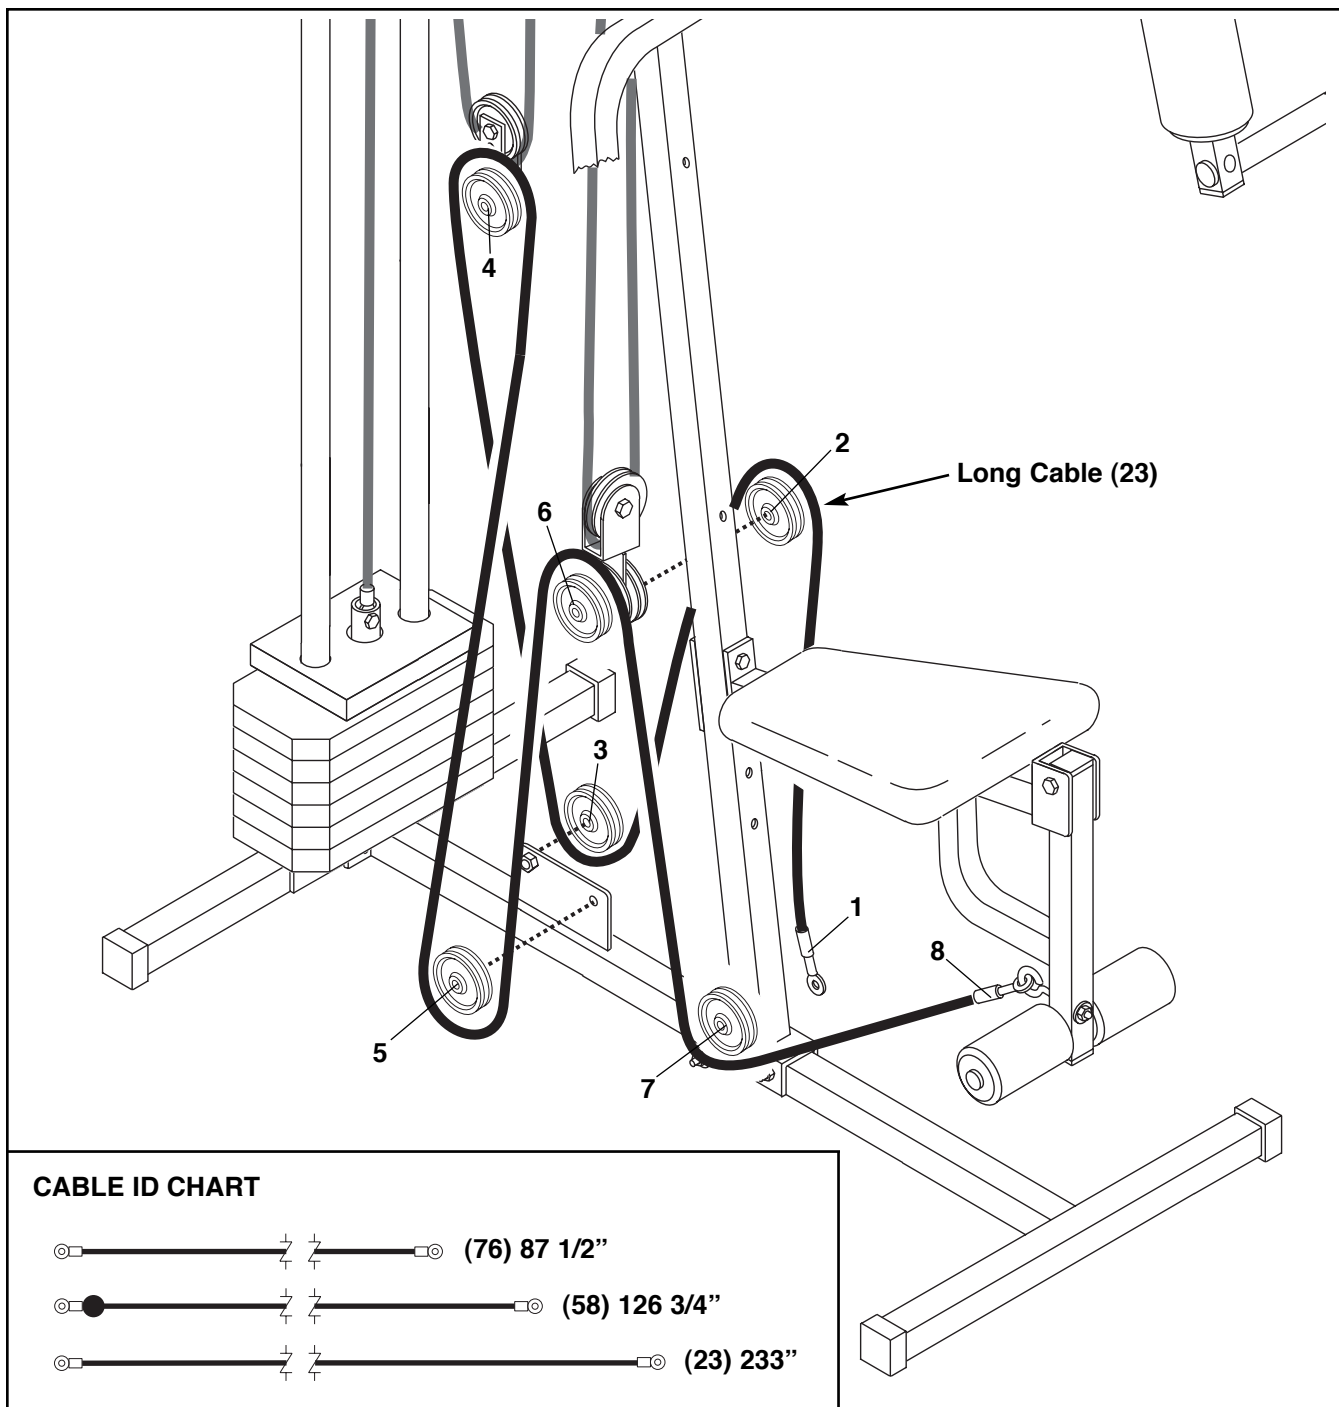


Adjustment

The instructions below describe how each part of the weight system can be adjusted. Refer to the exercise poster accompanying this manual to see how the weight system should be set up for each exercise. **IMPORTANT: When attaching the lat bar, make sure it is in the correct starting position for the exercise to be performed. If there is any slack in the cables as an exercise is performed, the effectiveness of the exercise will be reduced.**

CHANGING THE WEIGHT SETTING

To change the setting of the weight stack, insert a Weight Pin (26) under the desired Weight (25). Be sure to insert the Weight Pin until the bent end of the Weight Pin is touching the Weights. Then turn the bent end downward. The setting of the weight stack can be changed from 6.5 pounds to 81.5 pounds, in increments of 12.5 pounds.


Note: Due to the cables and pulleys, the amount of resistance at each exercise station may vary from the weight setting. Use the WEIGHT RESISTANCE CHART on page 19 to find the approximate amount of resistance at each weight station.

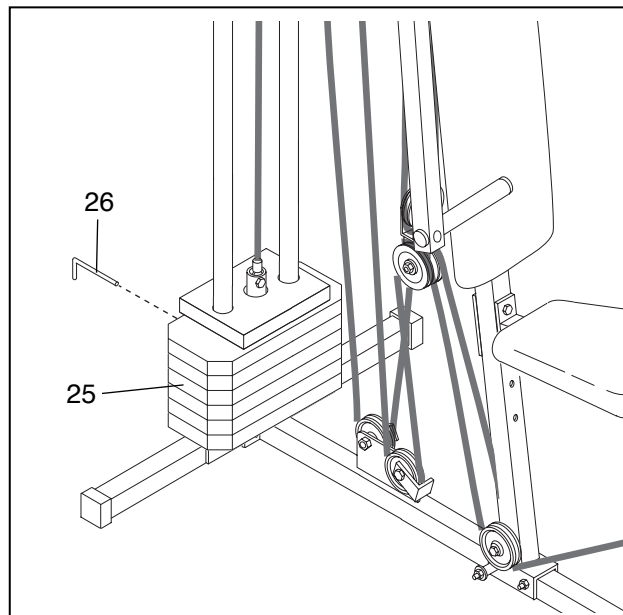

ATTACHING THE LAT BAR TO THE PULLEY STATION

Attach the Lat Bar (54) to the Medium Cable (58) with a Cable Clip (53).

CAUTION: Always disconnect the Lat Bar (54) from the weight system when performing an exercise that does not require the Lat Bar.

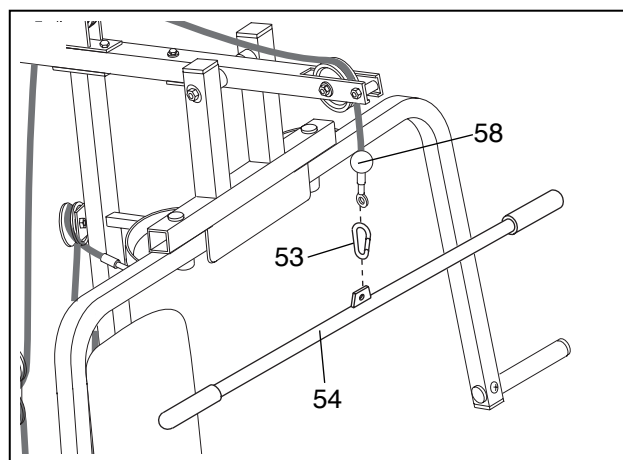


ADJUSTING THE ARMS FOR BUTTERFLY OR PRESS EXERCISES

The Left and Right Arms (47, 48) can be adjusted for either butterfly exercises or press exercises by turning the Locking Pin (75).

For butterfly exercises, position the Locking Pin (75) as shown in the drawing, so the tip locks into the indicated slot. The Arms (47, 48) will now pivot towards the centre without moving forward.

For press exercises, turn the Locking Pin (75) so the tip does not lock into the slot. The Arms (47, 48) will move forward without pivoting.

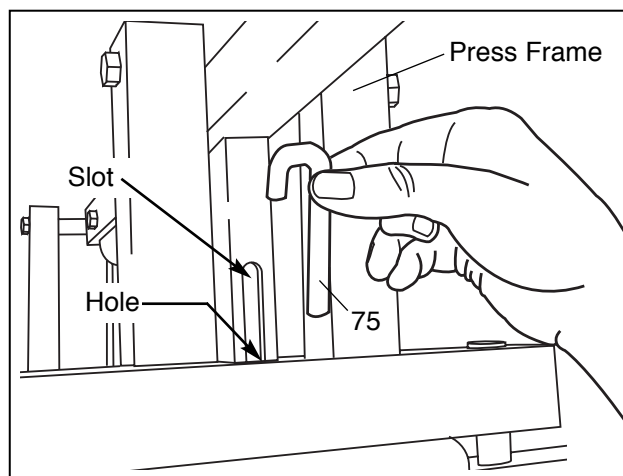

Trouble-shooting and Maintenance


Inspect and tighten all parts each time you use the weight system. Replace any worn parts immediately. The weight system can be cleaned using a damp cloth and mild non-abrasive detergent. Do not use solvents.

TIGHTENING THE CABLES

Woven cable, the type of cable used on the home gym system, can stretch slightly when it is first used. If there is slack in the cables before resistance is felt, the cables should be tightened.

To tighten the cables, first insert the weight pin between the third and the fourth weights, counting from the top. (See CHANGING THE WEIGHT SETTING on page 17 for instructions about moving the weight pin.)


Tighten the 3/8" Plain Nut (56) a few turns further onto the 3/8" Eyebolt (35) and then tighten the 3/8" Nylon Jamnut (22) securing the Eyebolt to the Leg Lever (29). Repeat this procedure until the cables feel tighter.

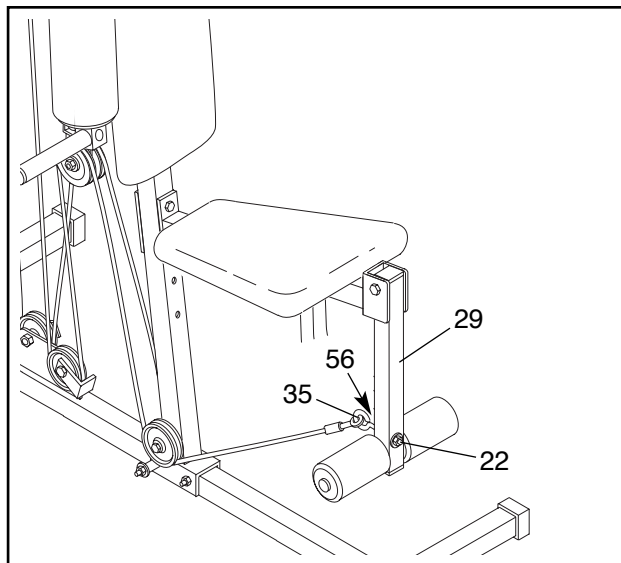

Additional slack can be removed by moving the upper 3 1/2" Pulley (15) attached to the "I"-Plates (20). To do this, remove the 3/8" x 2" Bolt (12), the Cable Trap (66), and 3/8" Nylon Locknut (21). Move the Pulley to a lower hole and re-attach it with the Bolt, Cable Trap, and Nylon Locknut. **Make sure that the Cable Trap is oriented as shown.**

Note: If a cable tends to slip off the pulleys often, the cable may have become twisted. Remove the cable and re-install it.

If the cables need to be replaced, see ORDERING REPLACEMENT PARTS on the back cover of this manual.

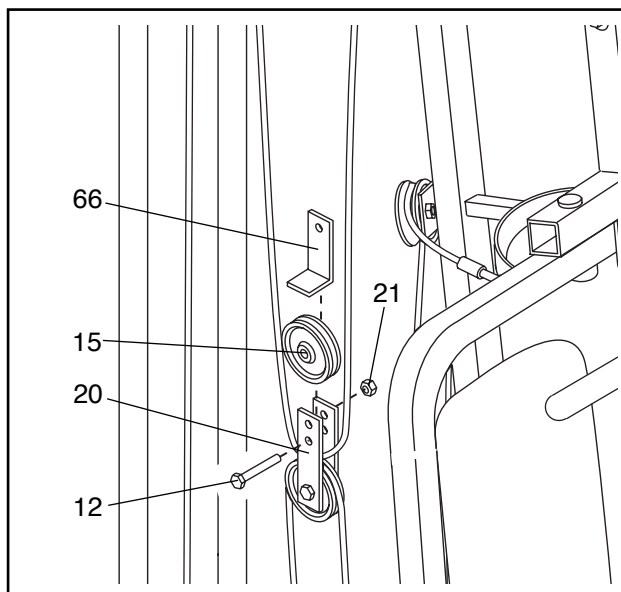

Weight Resistance Chart

This chart shows the approximate weight resistance at each station. “Top” refers to the 6.5 lb. top weight. The other numbers refer to the 12.5 lb. weight plates. Note: The actual resistance at each weight station may vary due to differences in individual weight plates, as well as friction between the cables, pulleys, and weight guides.

Weight Plates	Press Arm (lb.)	Butterfly Arm (lb.)	Pulley Station (lb.)	Leg Lever (lb.)
Top	13	20	14	9
1	30	44	28	23
2	46	66	44	34
3	65	84	60	47
4	84	96	72	60
5	101	120	90	72
6	121	138	103	86

**PLACE
STAMP
HERE**

ICON of Canada, Inc.
900 de l'Industrie
St-Jérôme, Québec
Canada, J7Y 4B8

Ordering Replacement Parts

To order replacement parts, simply call our Customer Service Department toll-free at 1-888-936-4266, Monday through Friday, 8 a.m. until 6:30 p.m. EST (excluding holidays). To help us assist you, please be prepared to give the following information:

- the MODEL NUMBER of the product (WECCSY74091)
- the NAME of the product (WEIDER® 740 weight system)
- the SERIAL NUMBER of the product (see the front cover of this manual)
- the KEY NUMBER and DESCRIPTION of the part(s) (see the PART LIST and EXPLODED DRAWING attached in the centre of this manual).


 WEIDER PRO-FORM WESLO	
PRODUCT WARRANTY REGISTRATION	
IMPORTANT: MAIL WITHIN 14 DAYS OF PURCHASE	
NAME: _____ PHONE: _____	
ADDRESS: _____	
COUNTY: _____ POSTCODE: _____	
MODEL NO. _____ SERIAL NO. _____ PURCHASE DATE: _____	
RETAILER NAME: _____ RETAILER ADDRESS: _____	
1) Primary user(s) of product: ☐ Male ☐ Female ☐ Family	8) Did you consider purchasing fitness equipment from another manufacturer? ☐ No ☐ Yes What other Manufacturer? _____
2) Age of primary user: ☐ 0-24 ☐ 35-44 ☐ 55-64 ☐ 25-34 ☐ 45-54 ☐ 65 and over	9) Based on your impression of what you have purchased, would you buy another ICON product? ☐ Yes ☐ No ☐ No Opinion If not, what other brand name equipment would you purchase? _____
3) Annual household income: ☐ 0-9,999 ☐ 15,000-19,999 ☐ 10,000-14,999 ☐ 20,000+	10) What other type of exercise equipment do you own? ☐ Bicycle ☐ Exercise Cycle ☐ Treadmill ☐ Home Gym ☐ Weight Bench ☐ Stepper ☐ Cardio Glide ☐ Other
4) How many times a week do you exercise? ☐ Less than 3 times ☐ 3 times or more	11) Which type of magazines do you read regularly? ☐ Sports ☐ Fitness ☐ Motoring ☐ Business ☐ Computer ☐ General
5) Have you ever purchased an ICON product before? ☐ Yes ☐ No	12) Do you wish to be sent further bulletins about ICON products? ☐ Yes ☐ No
6) Where did you first see or hear about ICON products? ☐ Magazine ☐ Friend/relative ☐ Newspaper Ad ☐ Store ☐ Other	
7) What was the primary reason for purchasing this ICON product? ☐ Store Employee ☐ Television Ads ☐ Colour ☐ Electronic Features ☐ Magazine Ads ☐ Price ☐ Product Design ☐ Product Innovation ☐ Other Features	

THANK YOU FOR YOUR TIME


© 2001 ICON of Canada, Inc. Printed in Canada

REMOVE THIS PART IDENTIFICATION CHART FROM THE MANUAL


This chart is provided to help you identify the small parts used in assembly. The number in parenthesis below each part refers to the key number of the part. **Important: Some parts may have been pre-assembled for shipping purposes. If you cannot find a part in the parts bags, check to see if it has been pre-assembled.**

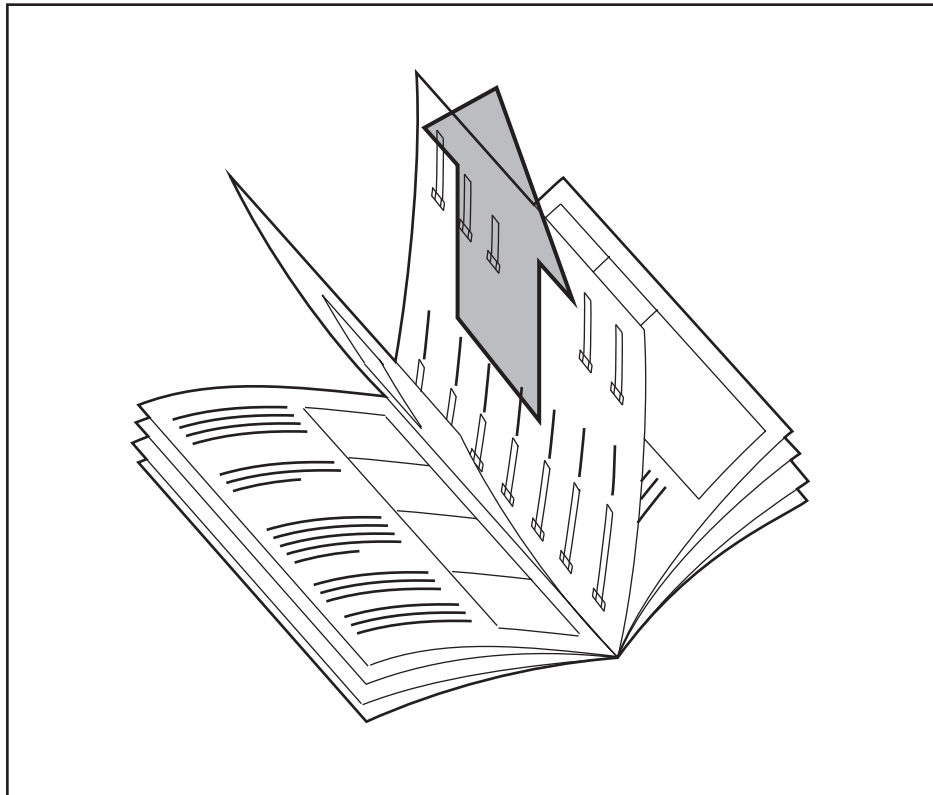


Note: Assembly is divided into three stages: 1) frame assembly; 2) arm assembly; and 3) cable, pulley, and seat assembly. The hardware for each assembly stage is packaged separately. Wait until you begin each stage to open the parts bag for that stage.

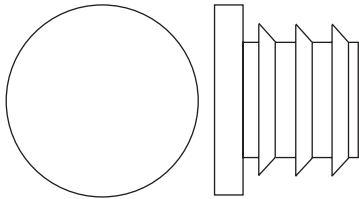


1" Round Inner Cap (49)

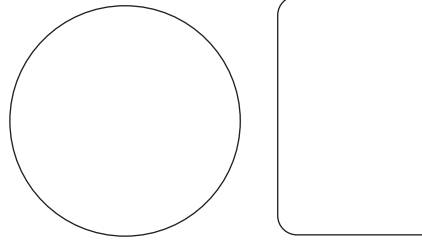


1" Round Cover Cap (70)

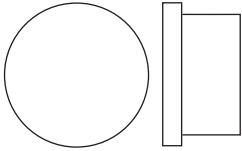


3/4" Round Inner Cap (34)

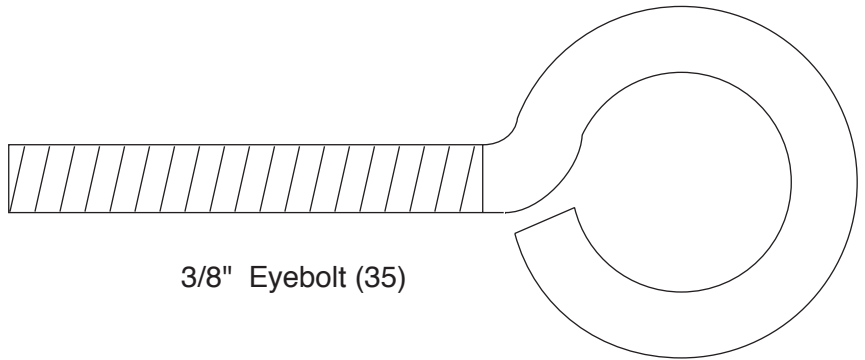


3/8" Eyebolt (35)

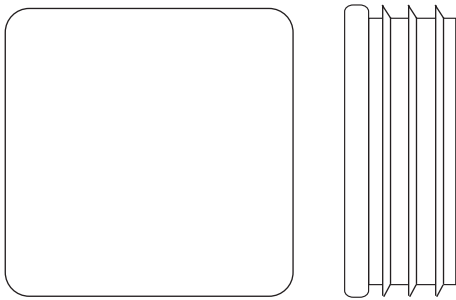


1 1/2" Square Inner Cap (32)

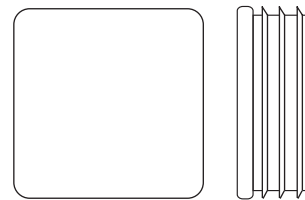

1" Square Inner Cap (65)

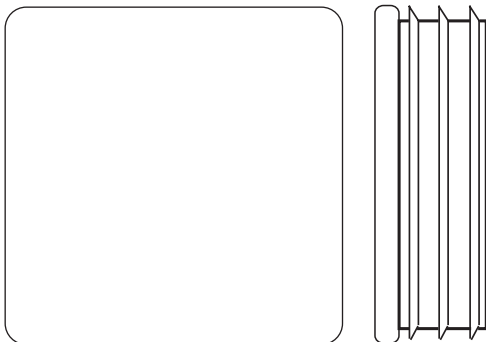


1 3/4" Square Inner Cap (77)

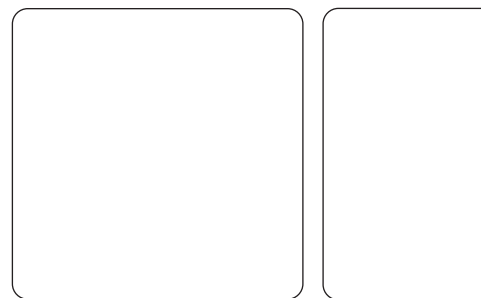


1 1/2" Square Outer Cap (27)

Part Identification Chart—WECCSY74091


R0503A




1/4" Nylon Locknut (2)




5/16" Nylon Locknut (3)




3/8" Nylon Jamnut (22)




3/8" Nylon Locknut (21)




3/8" Plain Nut (56)

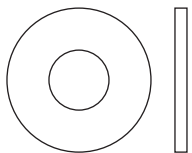


1/4" Flat Washer (10)

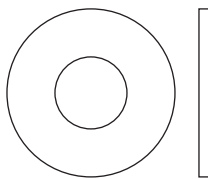


5/16" Flat Washer (8)

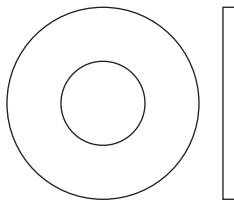


3/8" Flat Washer (9)




1/4" x 2 1/4" Carriage Bolt (38)




1/4" x 1 3/4" Screw (52)




1/4" x 2" Screw (24)




5/16" x 1 1/2" Bolt (11)




5/16" x 2" Bolt (78)




5/16" x 2 1/4" Bolt (1)



5/16" x 2 1/2" Bolt (14)




5/16" x 3 1/4" Bolt (33)



5/16" x 6" Bolt (7)

**REMOVE THIS PART LIST/EXPLODED
DRAWING FROM THE MANUAL**

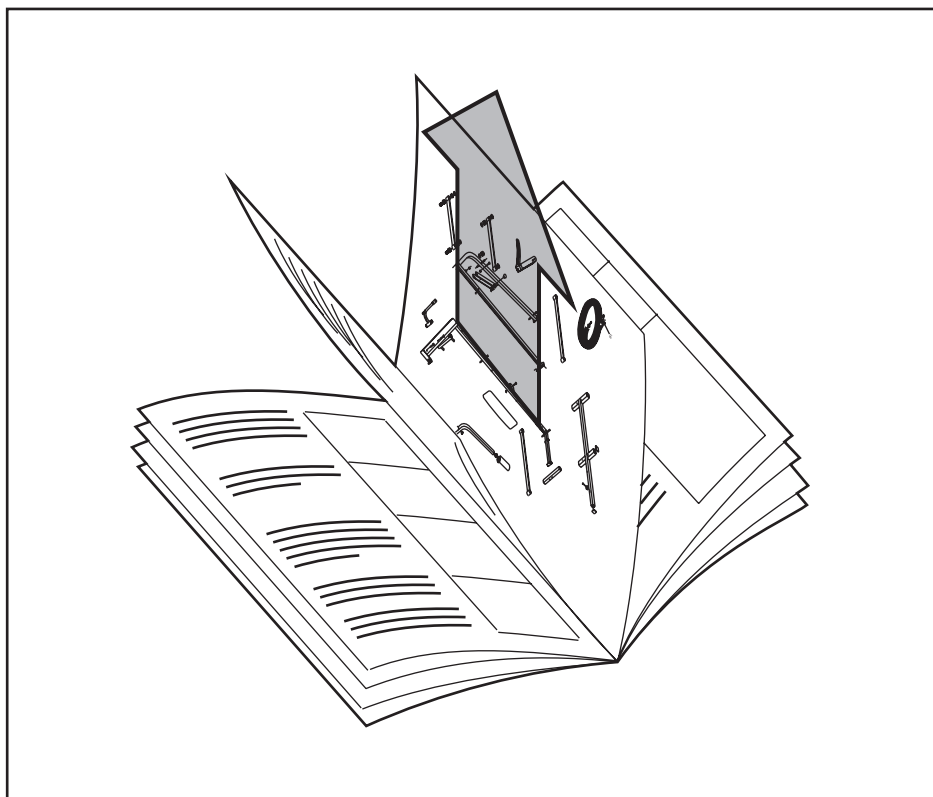

Part List—Model No. WECCSY74091

R0503A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	4	5/16" x 2 1/4" Bolt	41	1	Backrest
2	3	1/4" Nylon Locknut	42	1	Upright
3	12	5/16" Nylon Locknut	43	2	1/4" x 3/4" Screw
4	1	Base	44	4	1/2" x 1/4" Spacer
5	1	Stabilizer	45	1	1/2" x 3/4" Spacer
6	1	Support Plate	46	2	Press Handle
7	1	5/16" x 6" Bolt	47	1	Left Arm
8	2	5/16" Flat Washer	48	1	Right Arm
9	6	3/8" Flat Washer	49	4	1" Round Inner Cap
10	6	1/4" Flat Washer	50	2	Long Cable Trap
11	1	5/16" x 1 1/2" Bolt	51	2	1/2" x 1" Spacer
12	6	3/8" x 2" Bolt	52	2	1/4" x 1 3/4" Screw
13	1	Seat	53	1	Cable Clip
14	4	5/16" x 2 1/2" Bolt	54	1	Lat Bar
15	11	3 1/2" Pulley	55	1	Top Frame
16	1	3/8" x 6" Bolt	56	3	3/8" Plain Nut
17	1	Press Frame	57	1	Pulley Bracket
18	2	#8 x 1" Screw	58	1	Medium Cable
19	2	Weight Bumper	59	2	3/8" x 1" Bolt
20	2	"I" Plate	60	4	3/8" x 2 1/2" Bolt
21	7	3/8" Nylon Locknut	61	2	1/2" x 1 3/8" Spacer
22	10	3/8" Nylon Jamnut	62	1	Weight Guide Support
23	1	Long Cable	63	1	Weight Tube
24	3	1/4" x 2" Screw	64	1	Weight Tube Bumper
25	6	Weight	65	1	1" Square Inner Cap
26	1	Weight Pin	66	4	Cable Trap
27	4	1 1/2" Square Outer Cap	67	1	Top Weight
28	1	Pad Tube	68	2	3/8" x 1 3/4" Bolt
29	1	Leg Lever	69	4	1" Retaining Ring
30	2	Foam Pad	70	2	1" Round Cover Cap
31	2	Hand Grip	71	2	7" Foam Pad
32	6	1 1/2" Square Inner Cap	72	1	3/8" x 3" Bolt
33	1	5/16" x 3 1/4" Bolt	73	2	Inner Cap
34	2	3/4" Round Inner Cap	74	2	1 1/8" x 2 1/2" Plastic Bushing
35	1	3/8" Eyebolt	75	1	Locking Pin
36	1	Seat Frame	76	1	Butterfly Cable
37	1	Seat Plate	77	6	1 3/4" Square Inner Cap
38	1	1/4" x 2 1/4" Carriage Bolt	78	1	5/16" x 2" Bolt
39	2	Large Pulley	#	1	User's Manual
40	1	Large Pulley Bracket	#	1	Exercise Poster

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice.

Exploded Drawing—Model No. WECCSY74091

R0503A

